



Montageanleitung	1
Mounting instructions	
Instructions de montage	
Instrucciones de montaje	
Istruzioni di montaggio	
Montaj Rehberi	

Ready mounted dimensions



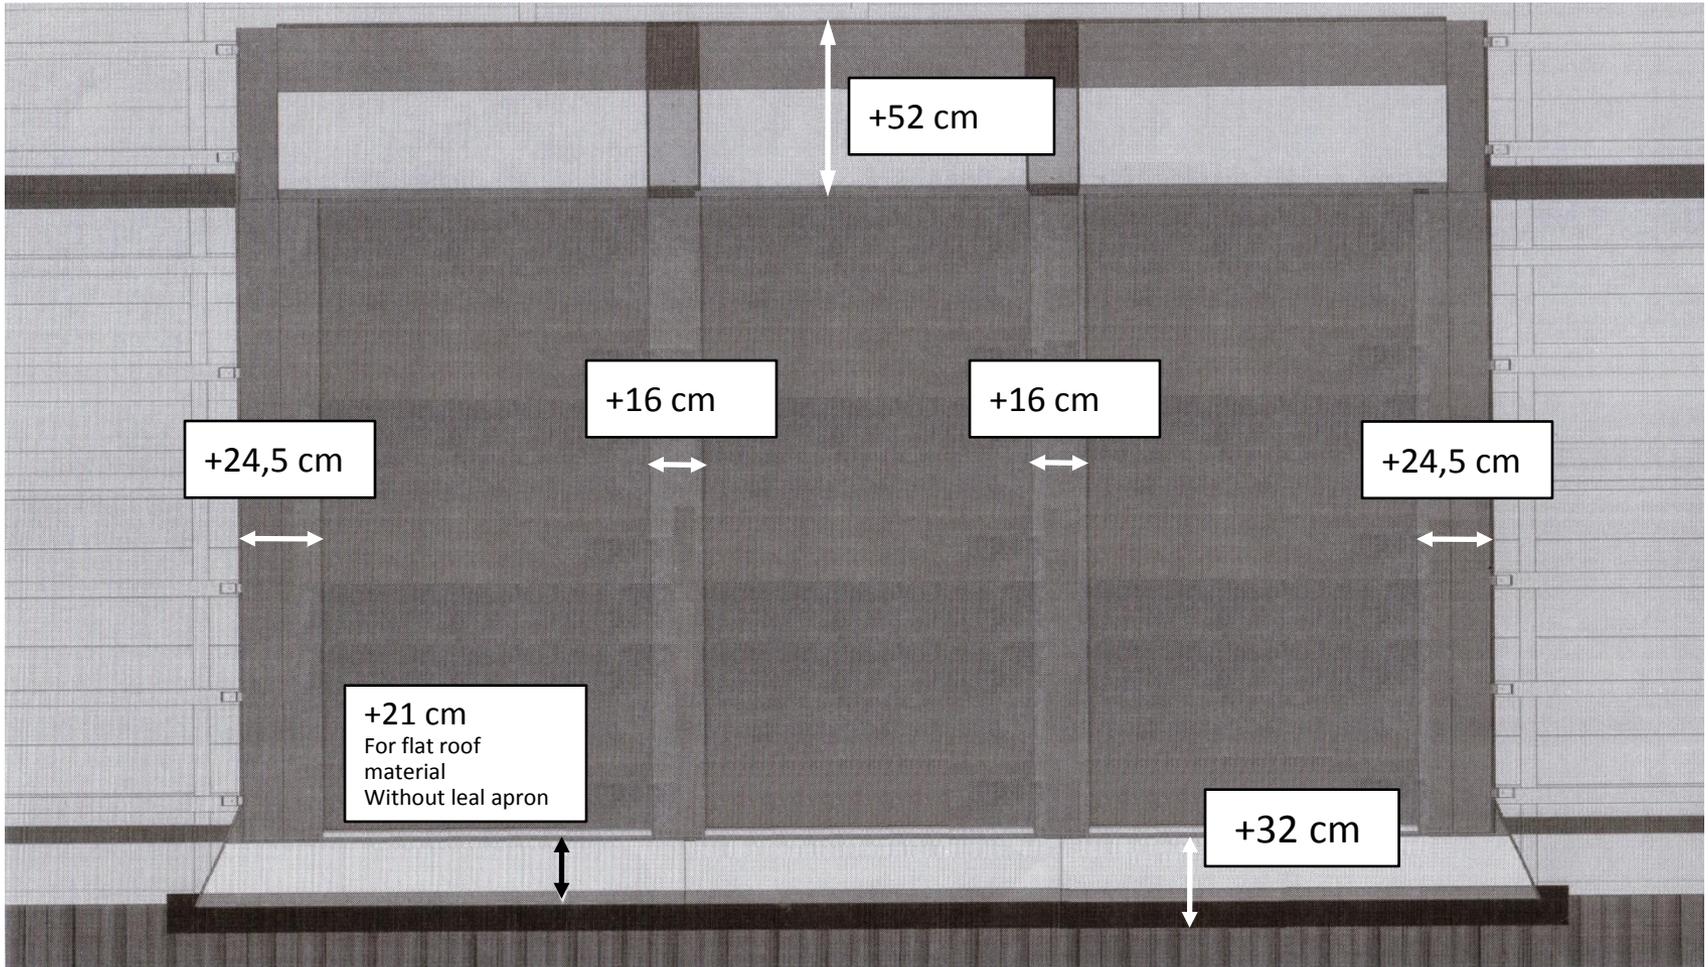


Before you start mounting the flashings please check the dimensions above, which show the ready mounted dimensions of the flashing. You have to add the dimensions of the flashing to the dimensions of the solar-panel so you will get the ready mounted dimensions of the complete solar-system.

This mounting instruction is valid for corrugated and flat roof tiles (for flat roof-tiles the the frontparts are fabricated without aluminum-apron!!)




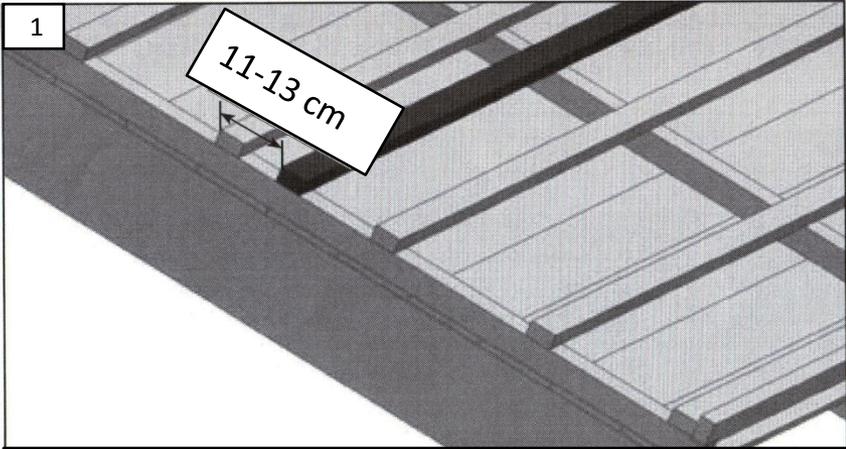






1
Before you start mounting of the frontparts must add an additional roof batten to stabilise the foreparts. The distance for this additional roof batten please see in the picture above.


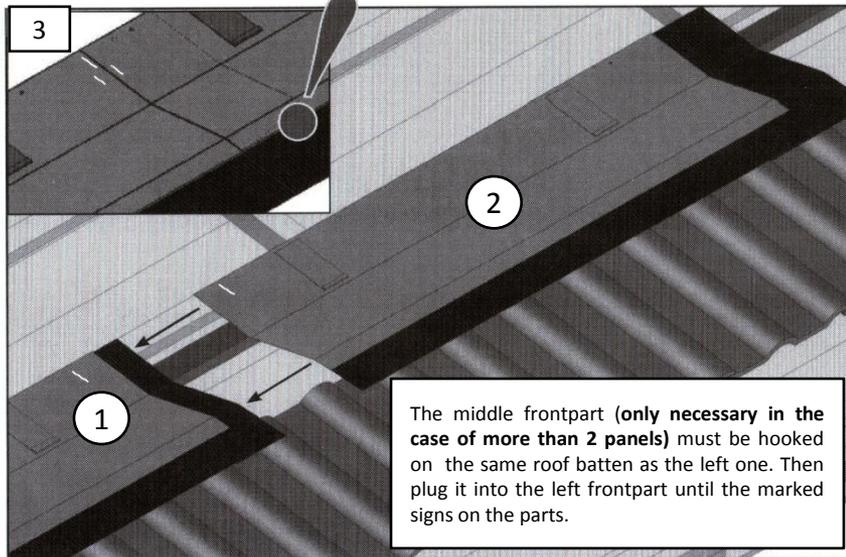
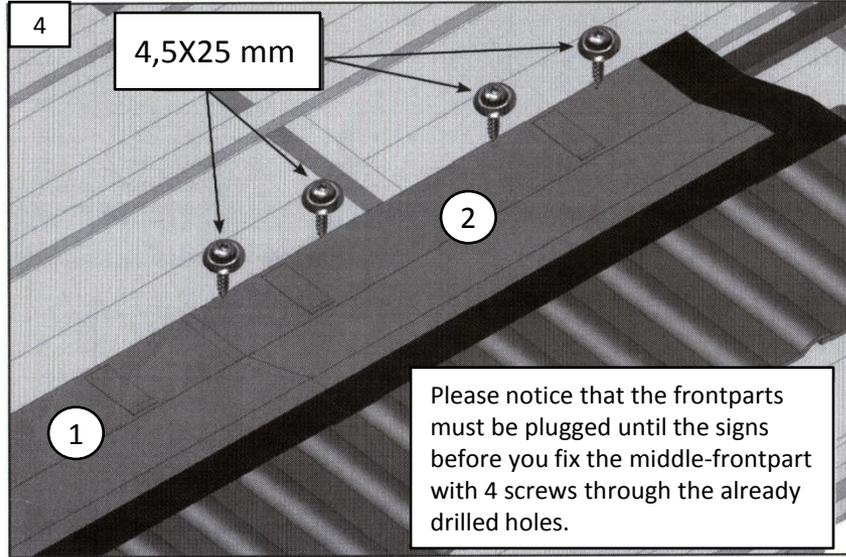
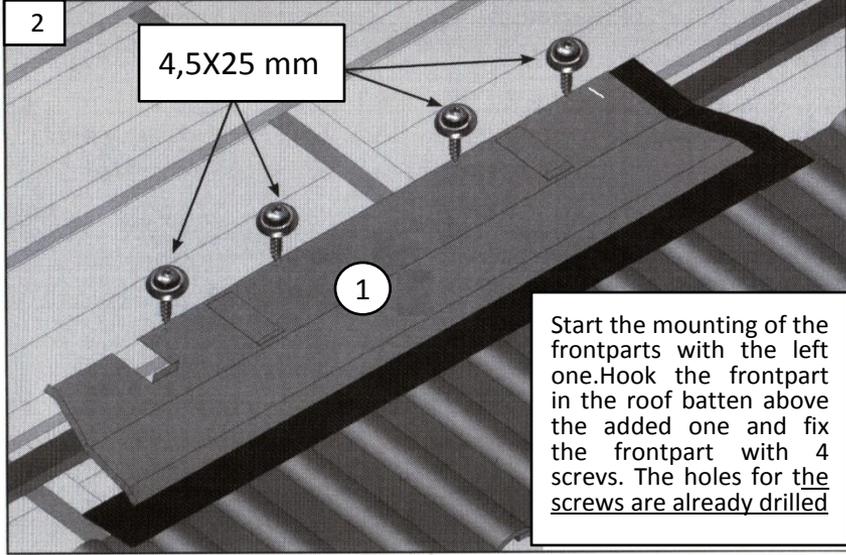






3
The middle frontpart (only necessary in the case of more than 2 panels) must be hooked on the same roof batten as the left one. Then plug it into the left frontpart until the marked signs on the parts.





4
Please notice that the frontparts must be plugged until the signs before you fix the middle-frontpart with 4 screws through the already drilled holes.

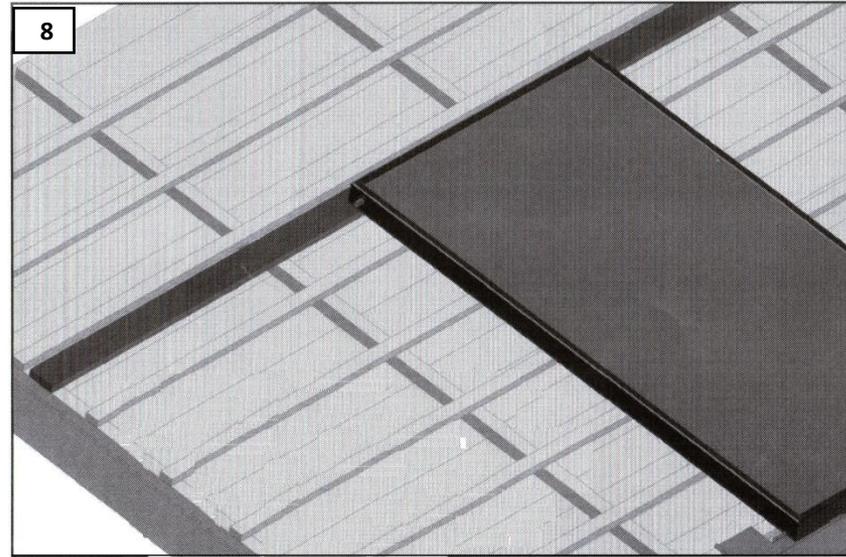
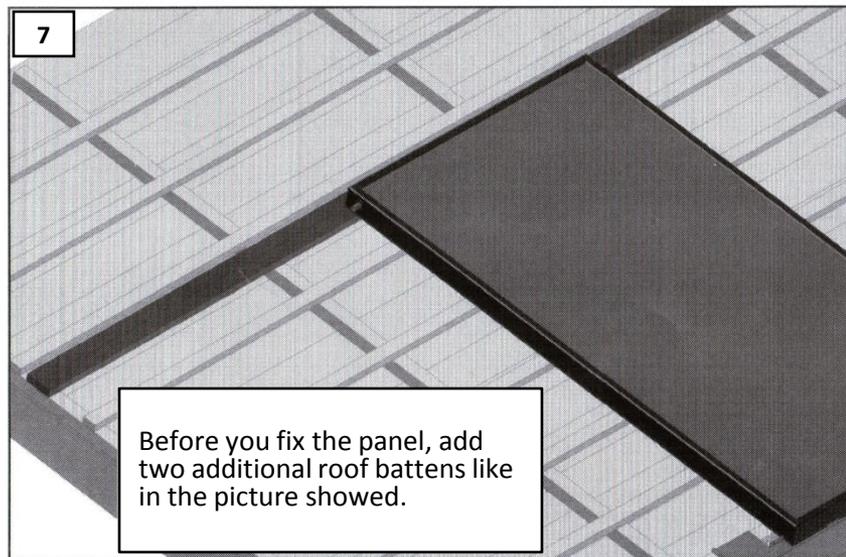
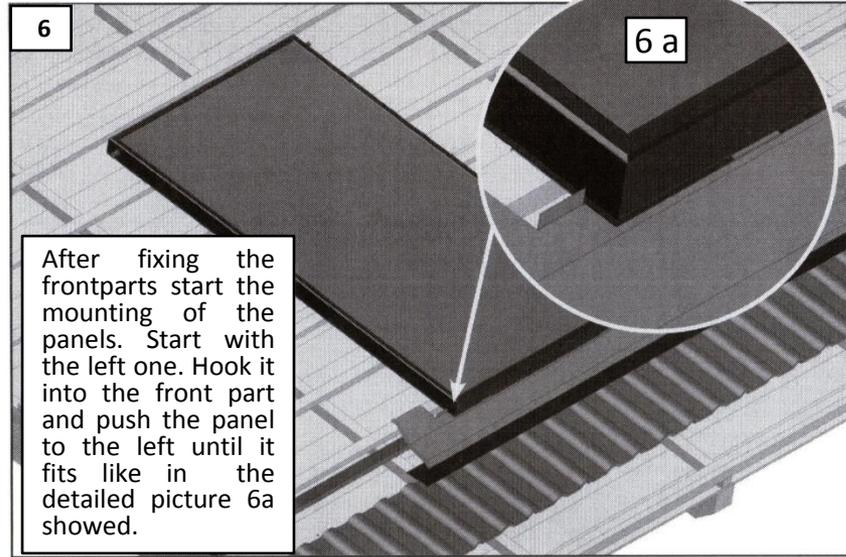
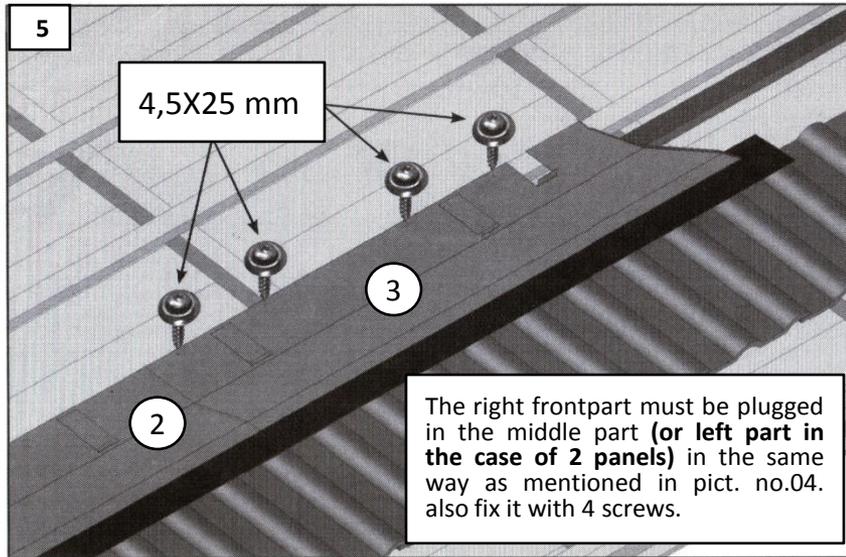


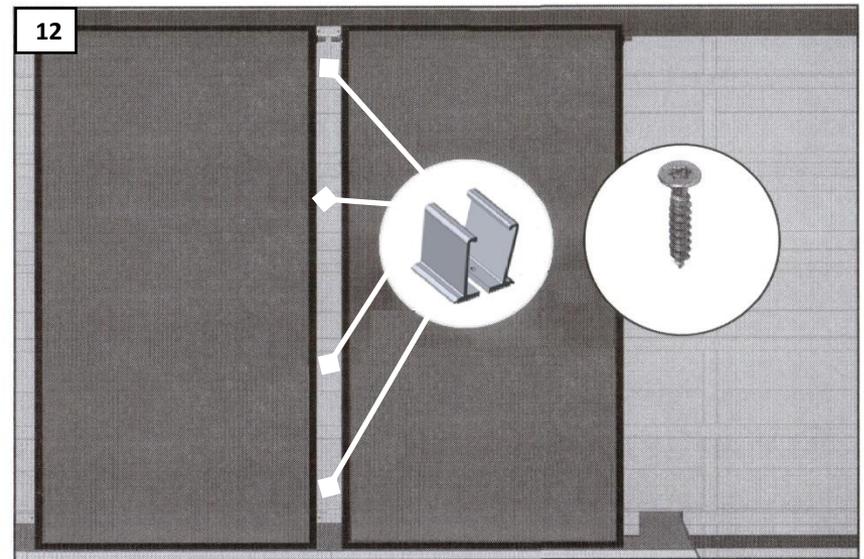
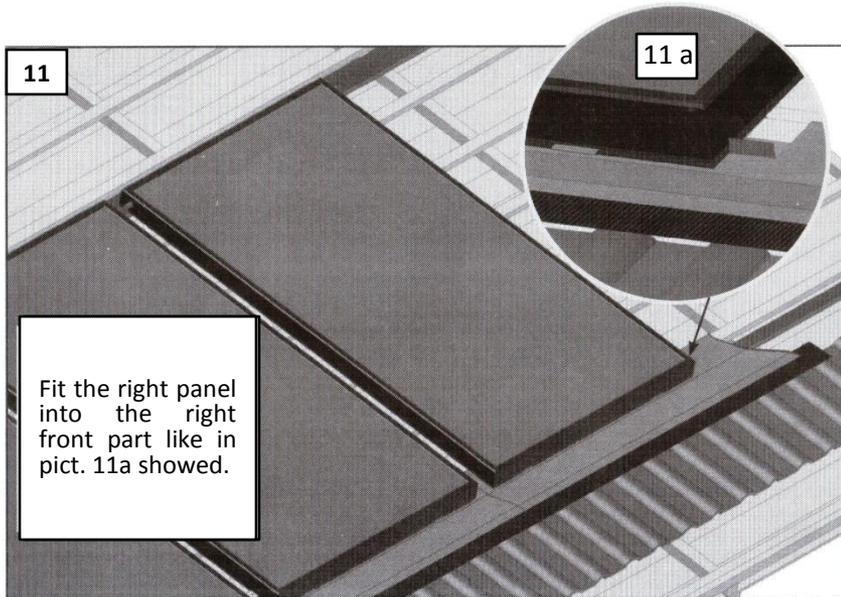
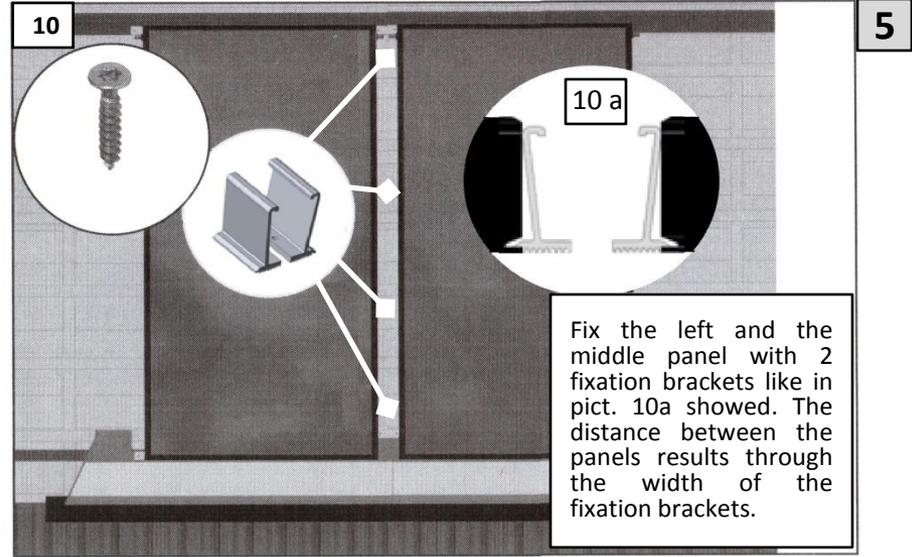
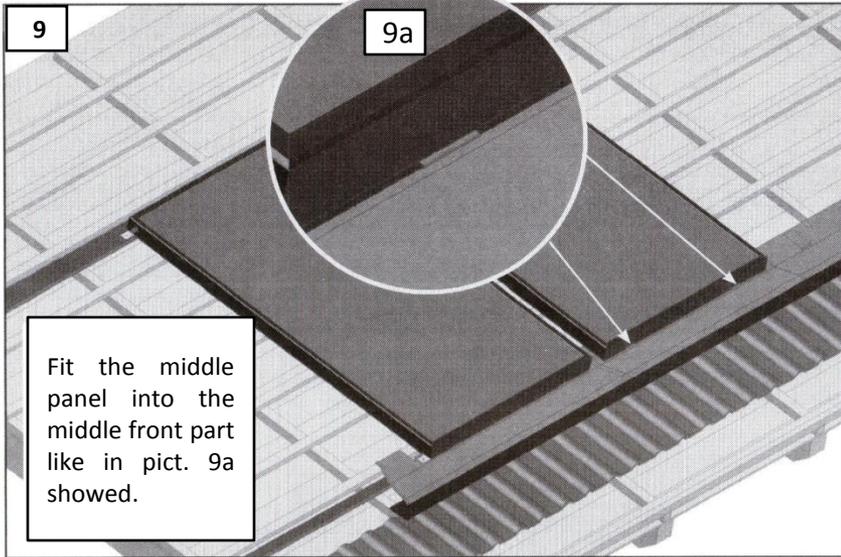


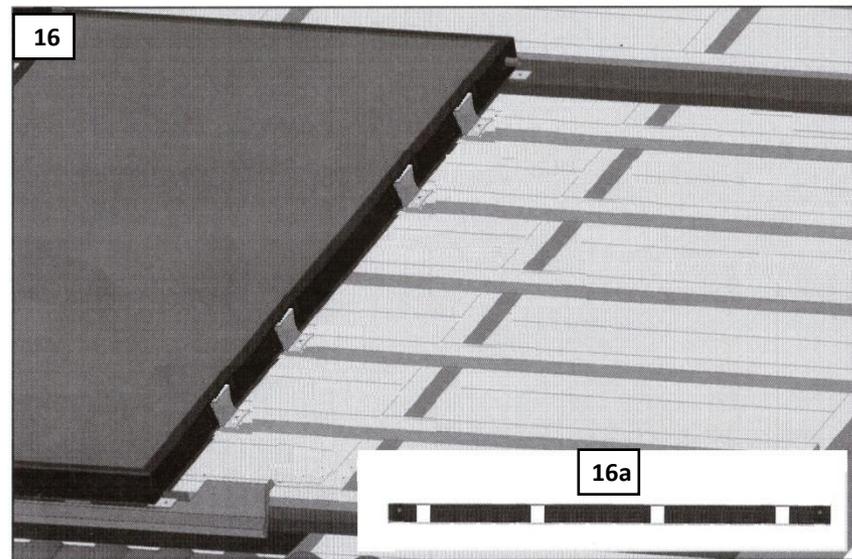
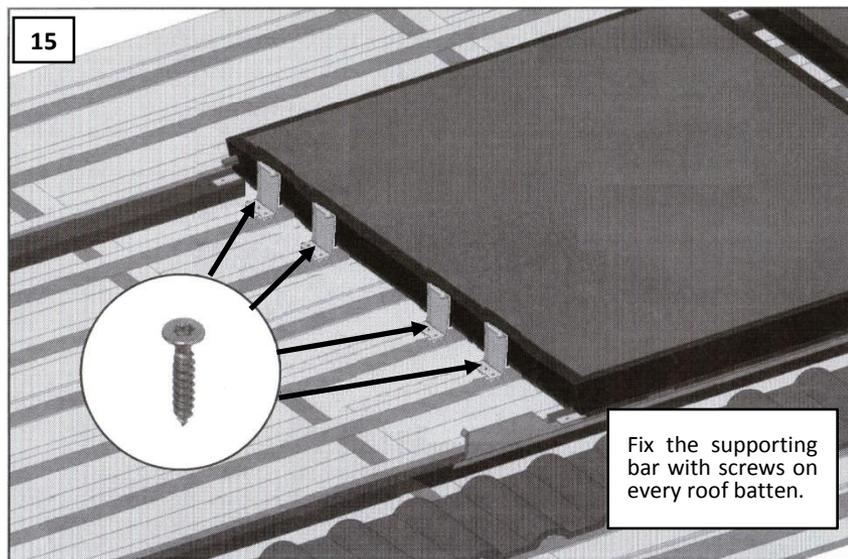
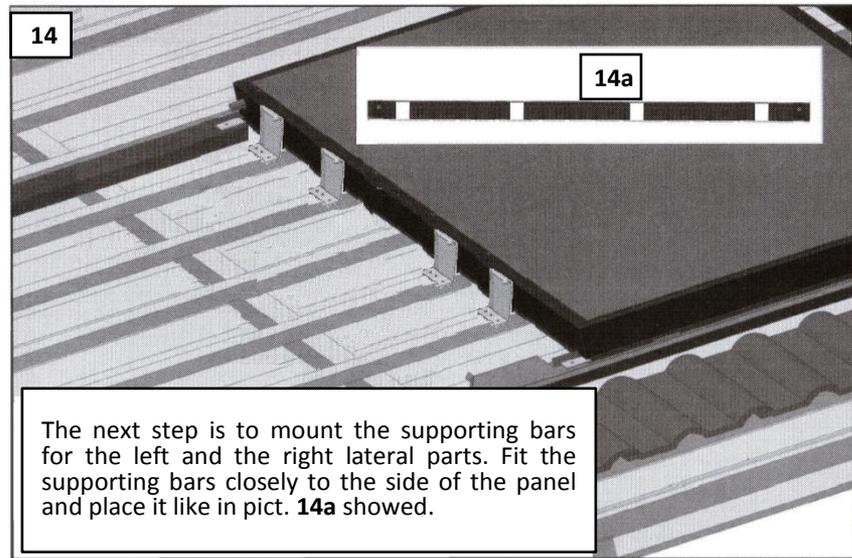
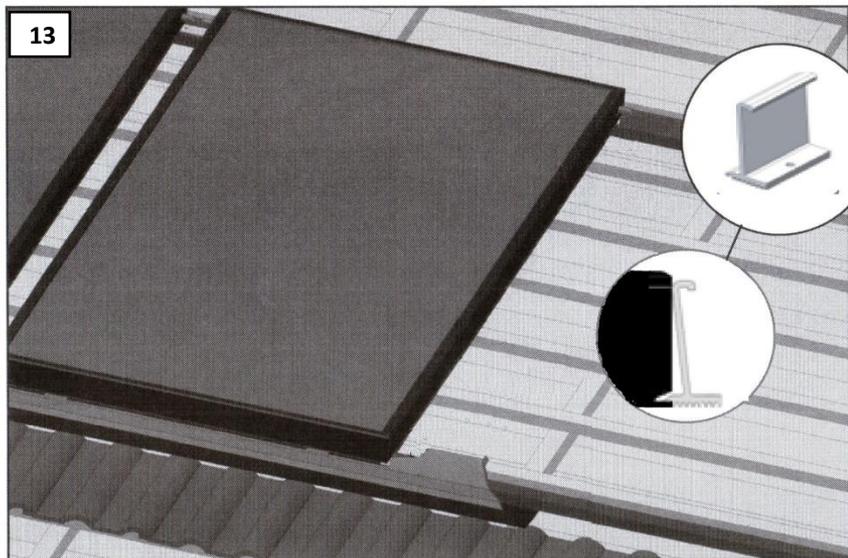


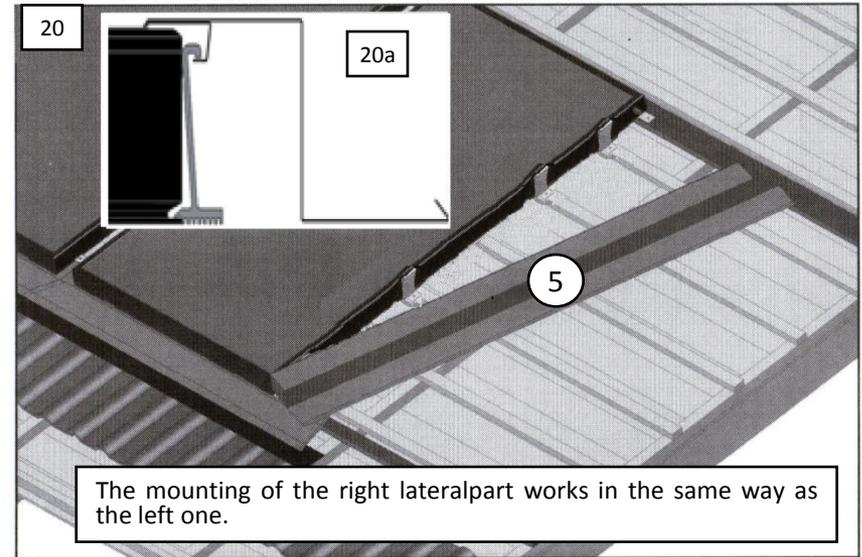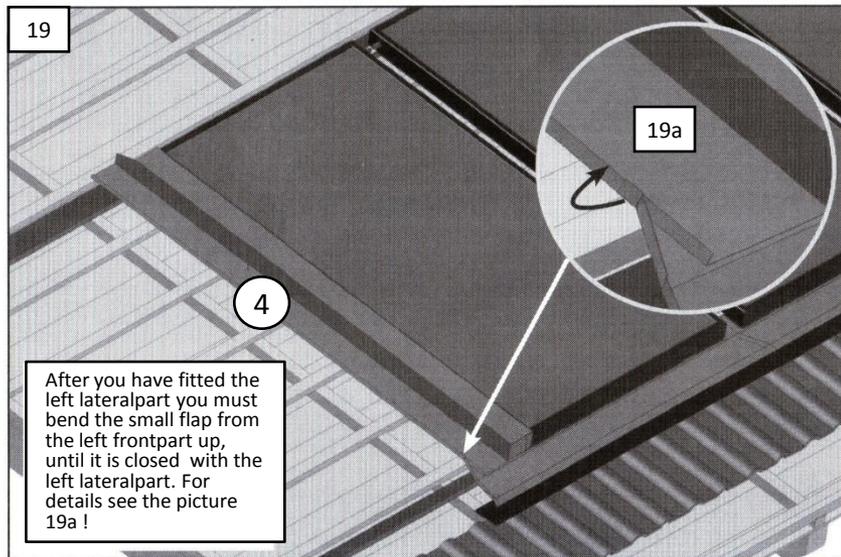
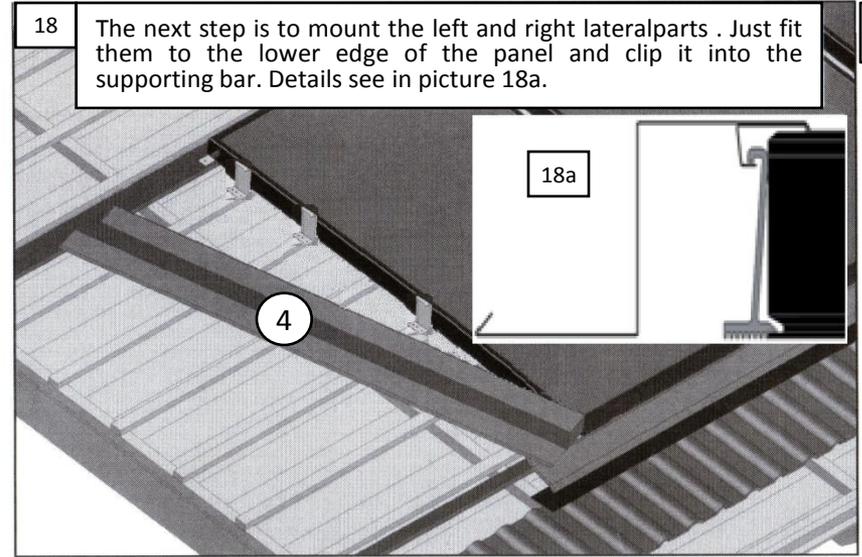
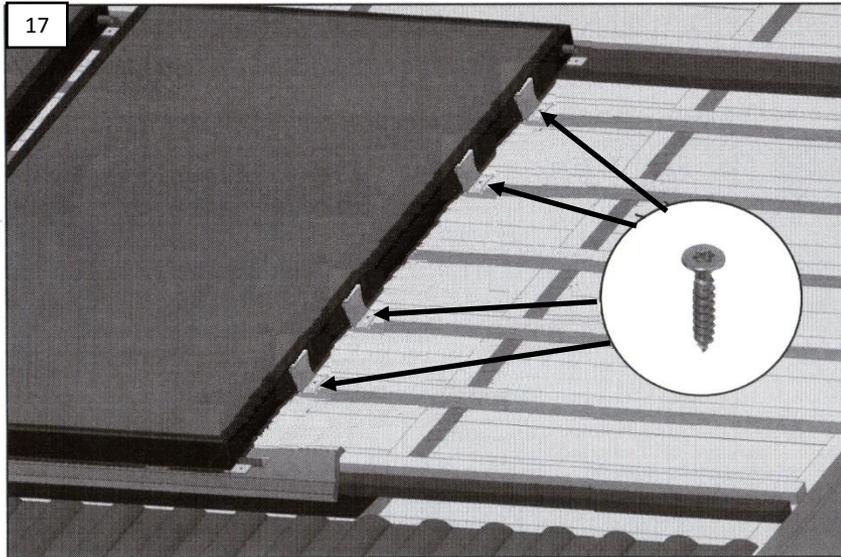


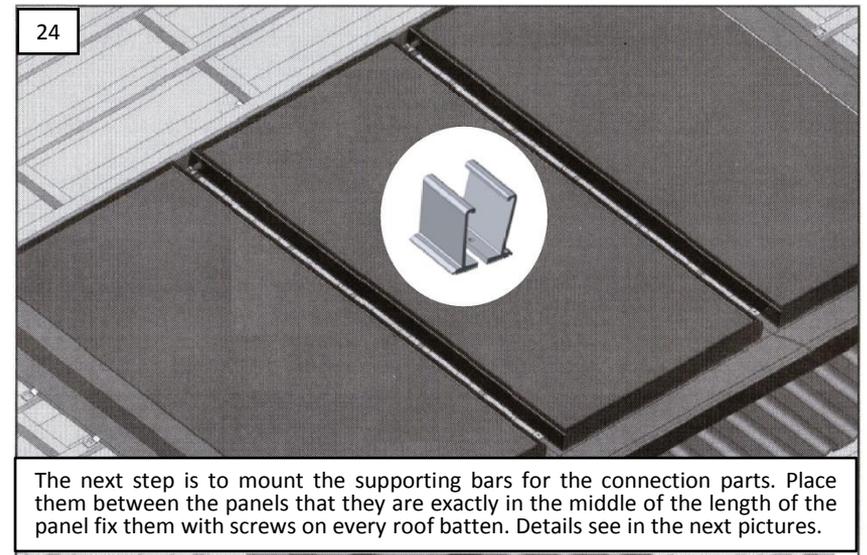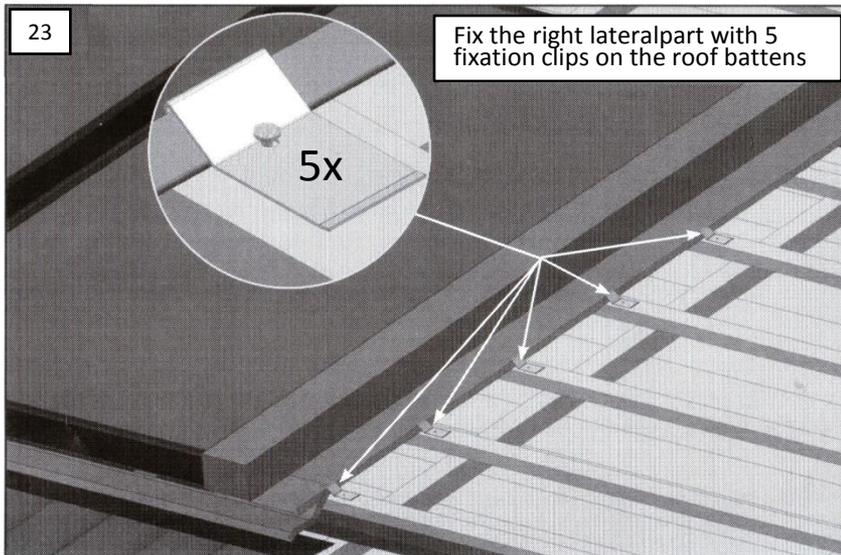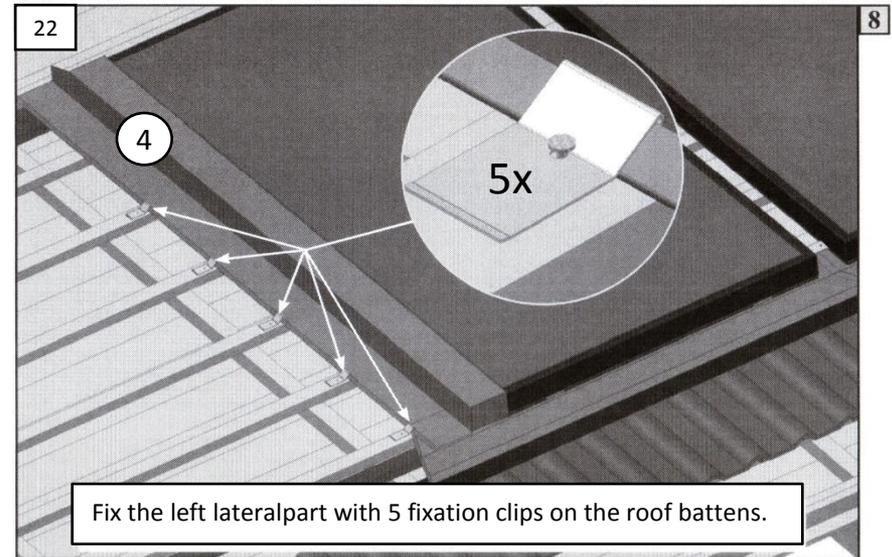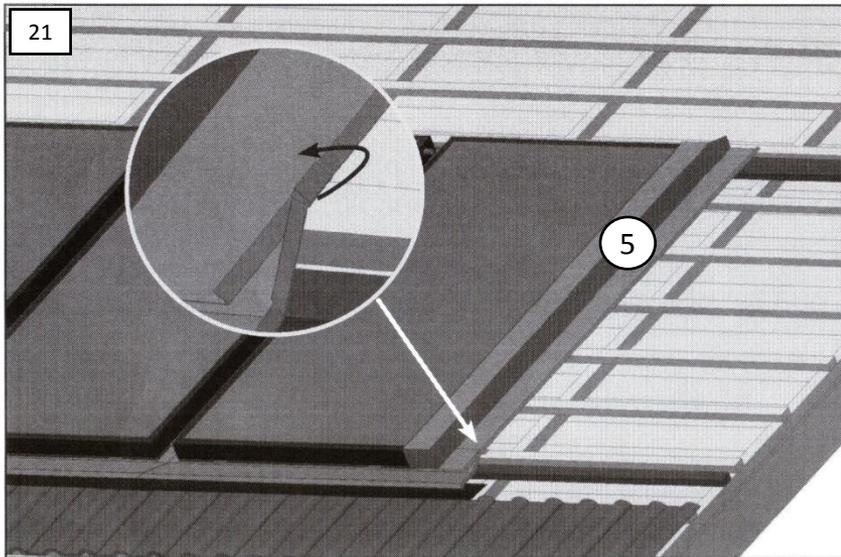

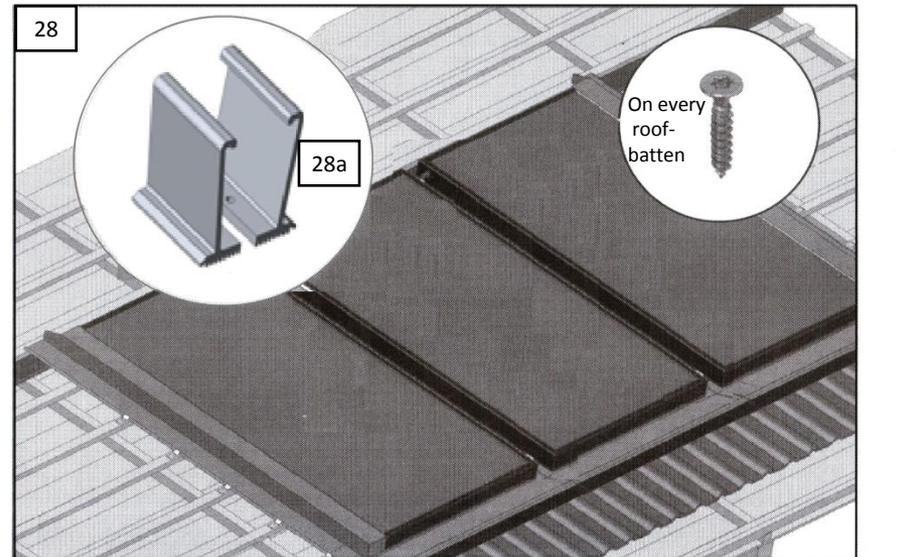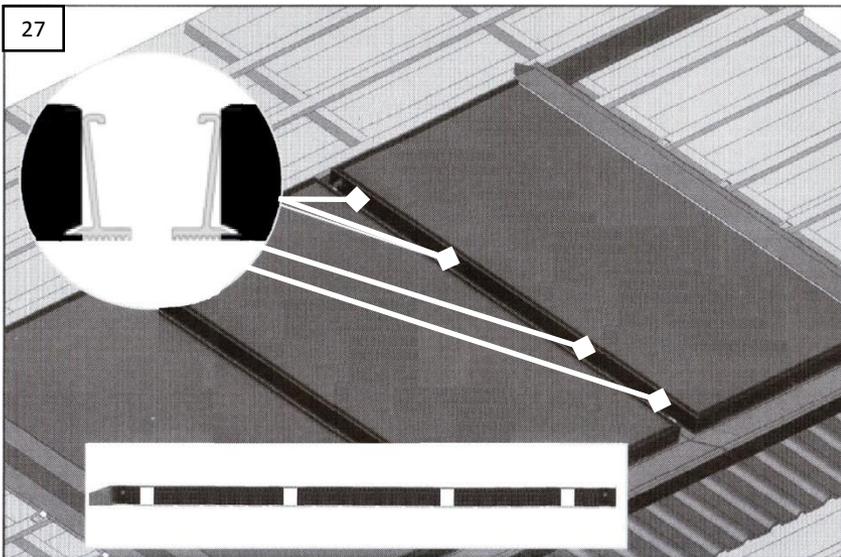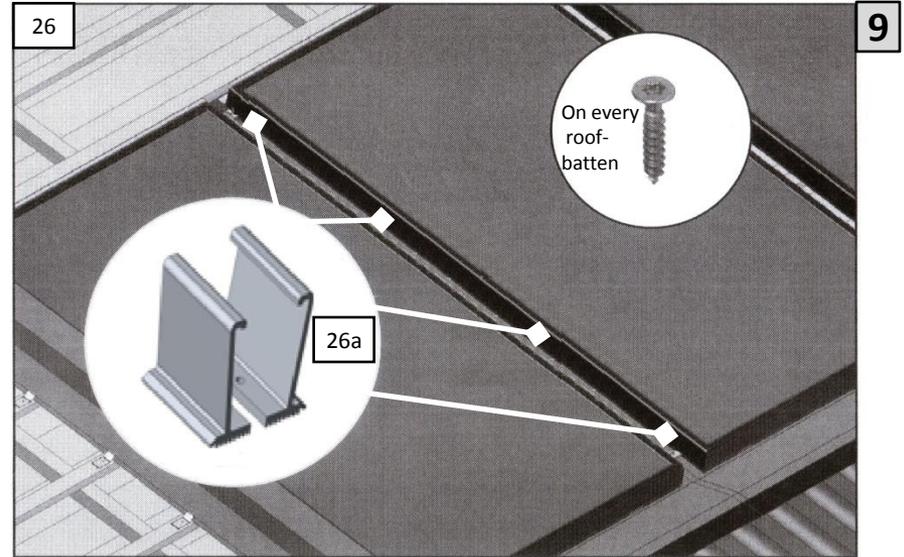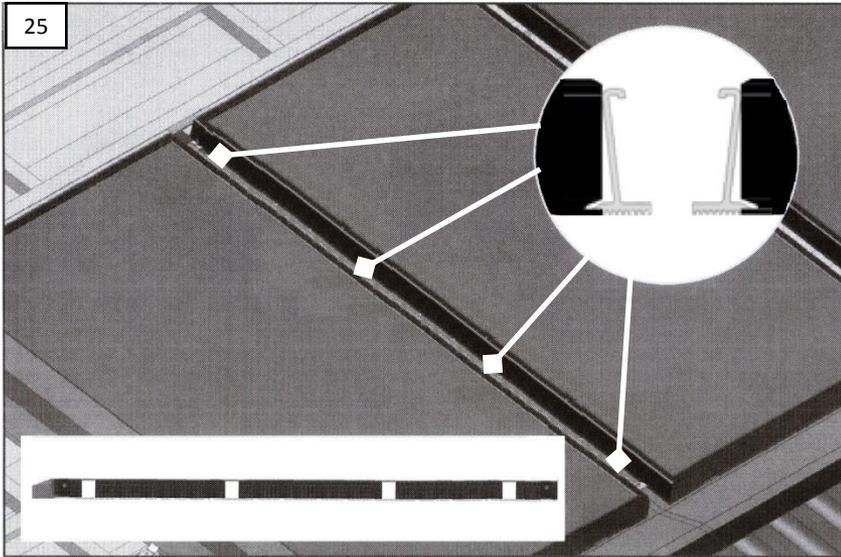


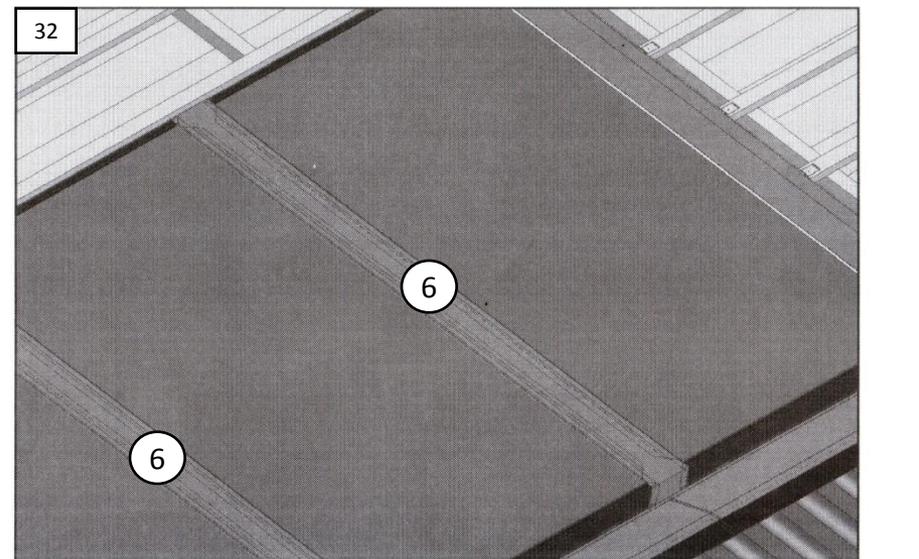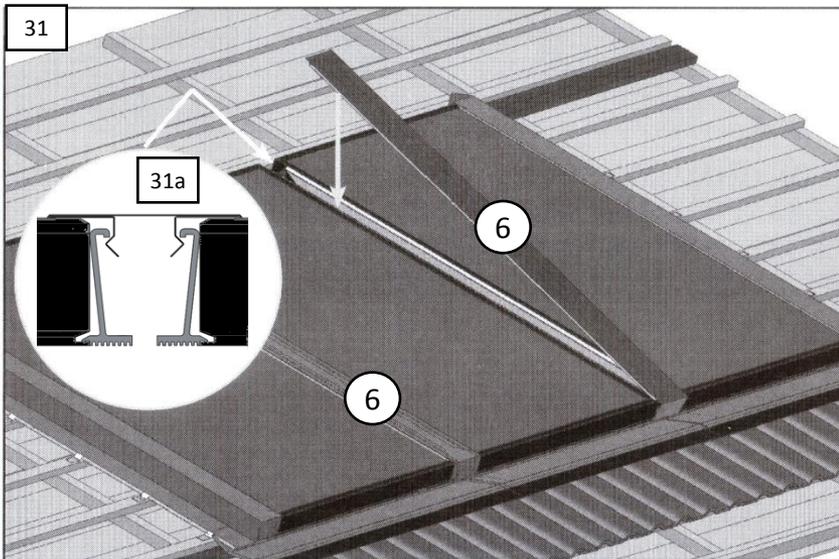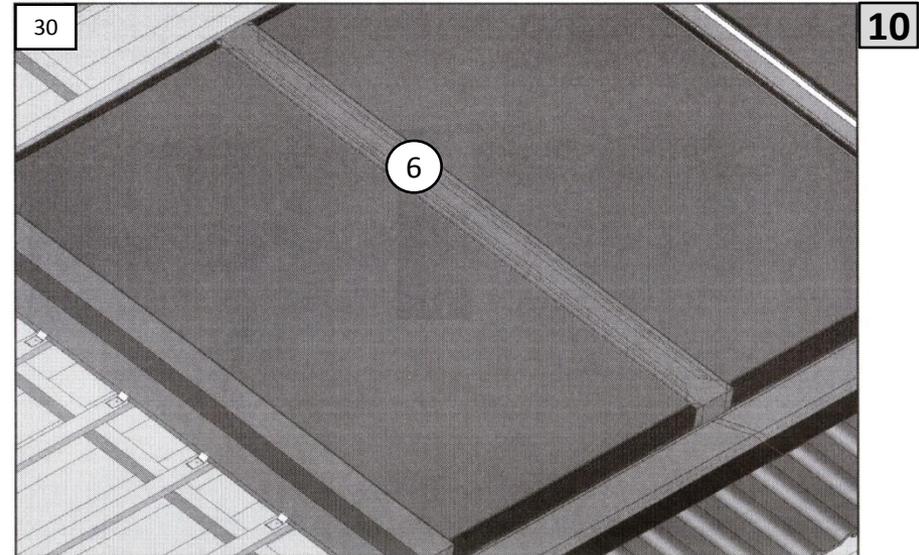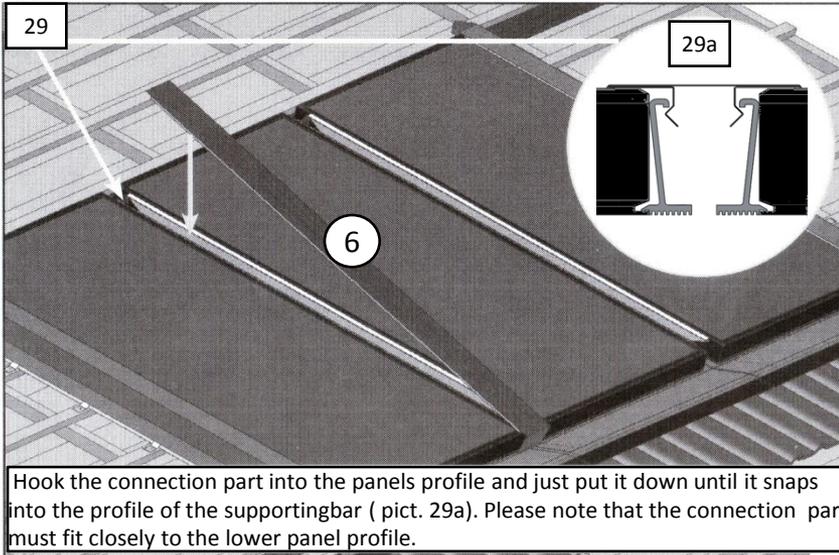

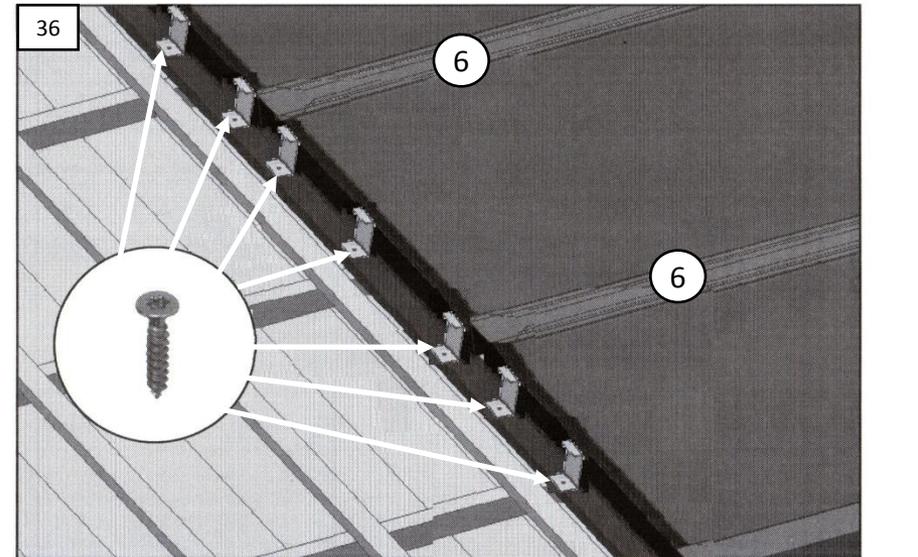
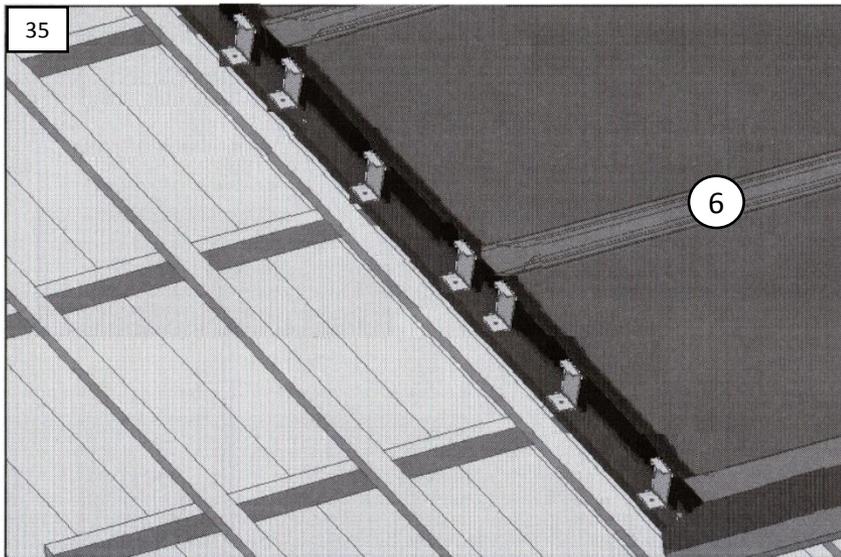
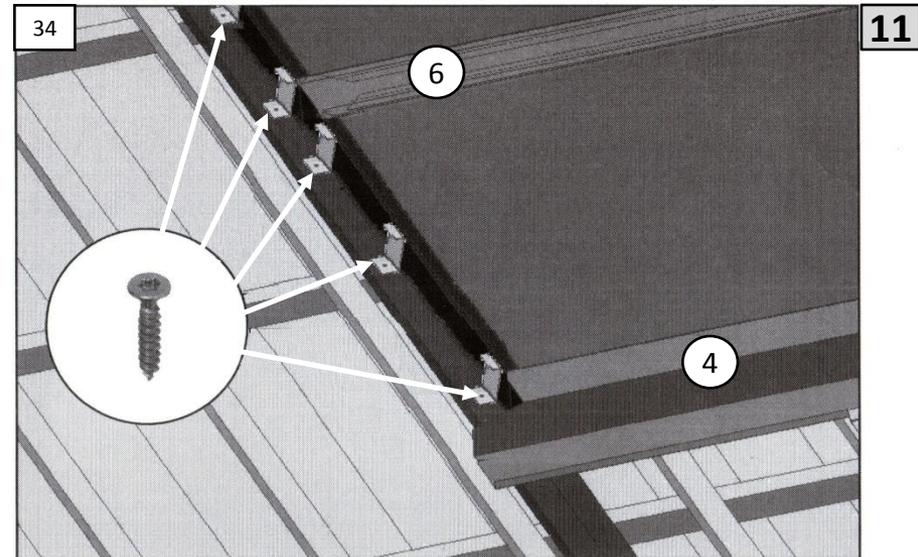
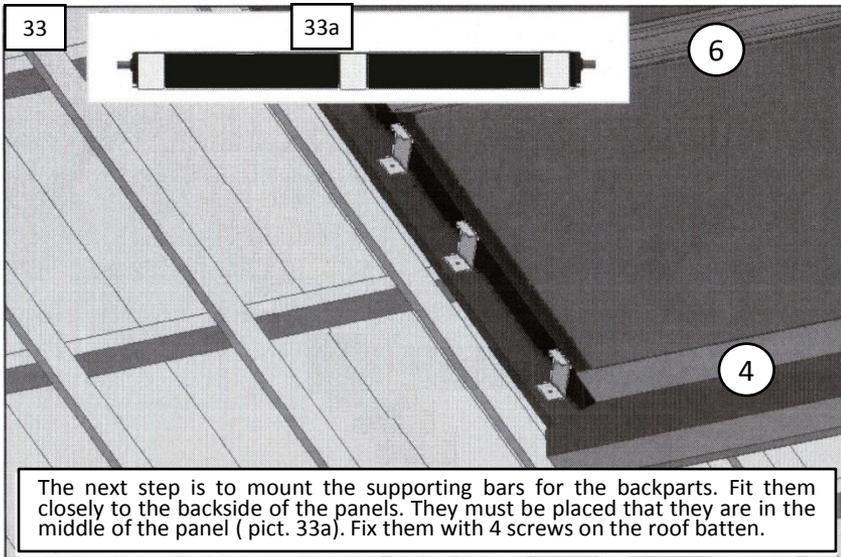



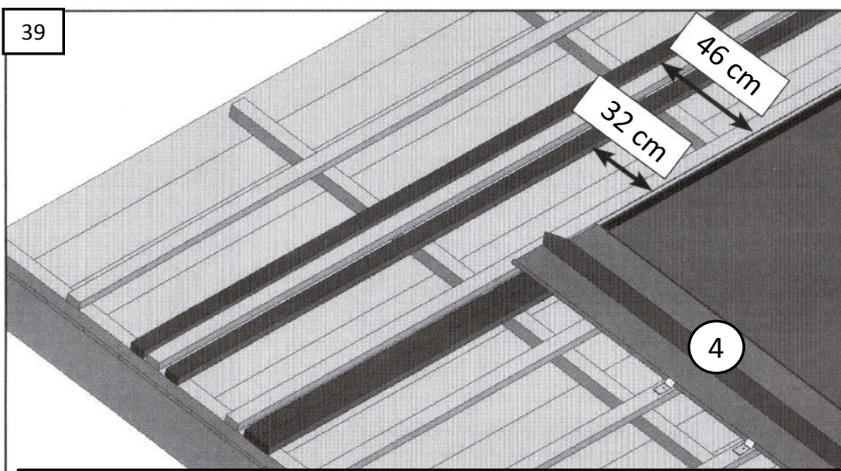
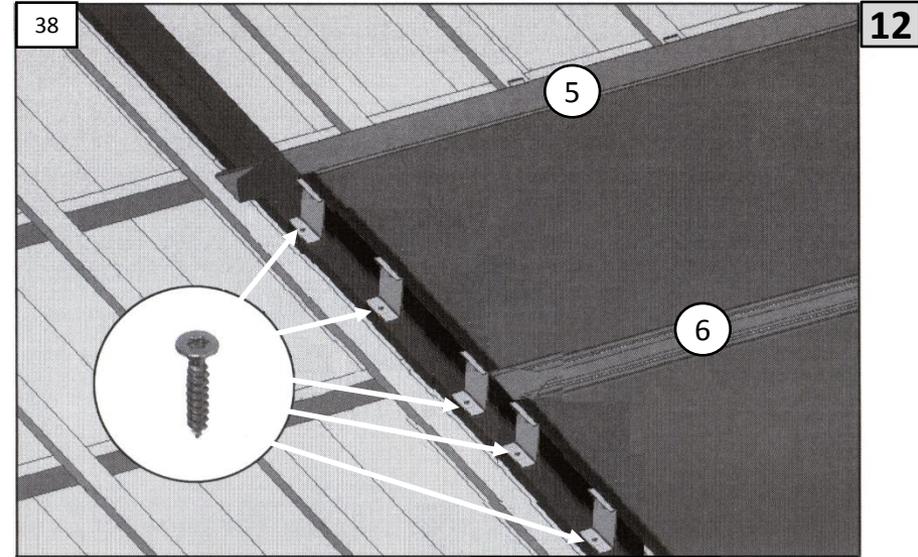
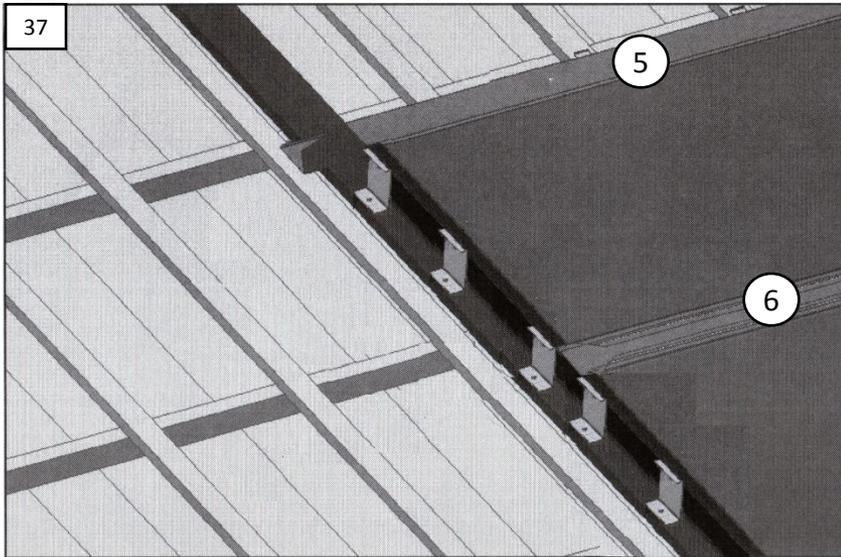






Before you start with the mounting of the support plates and backparts, please mount 2 additional roof battens for the stabilisation and fixation of the backparts.




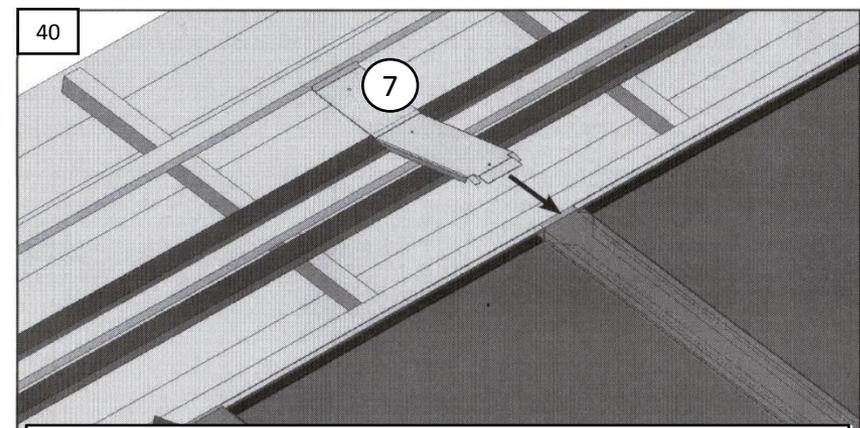




Before mounting the backparts you must fit the support plates between the panels. They are just hooked in the supporting bars for the backparts and **don't have to be fixed now. Please note, that the support plates also must cover the connectionparts** (please see pict. no.41a)

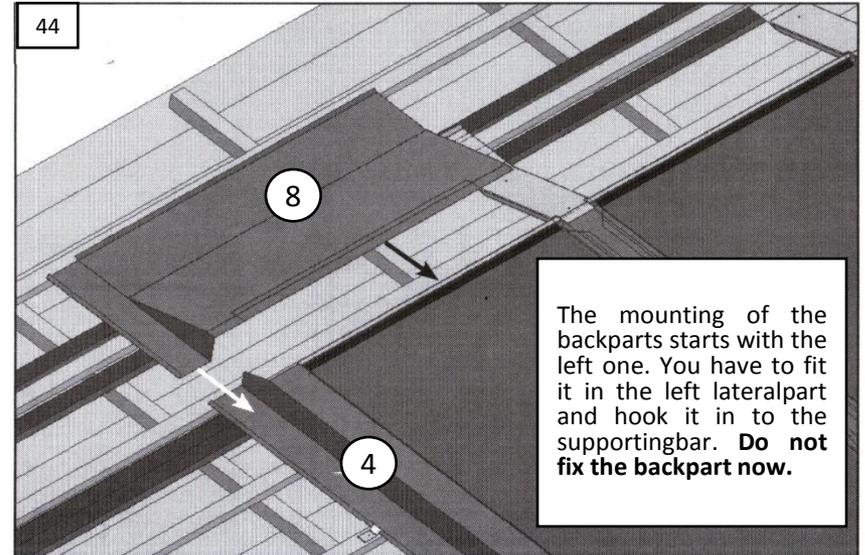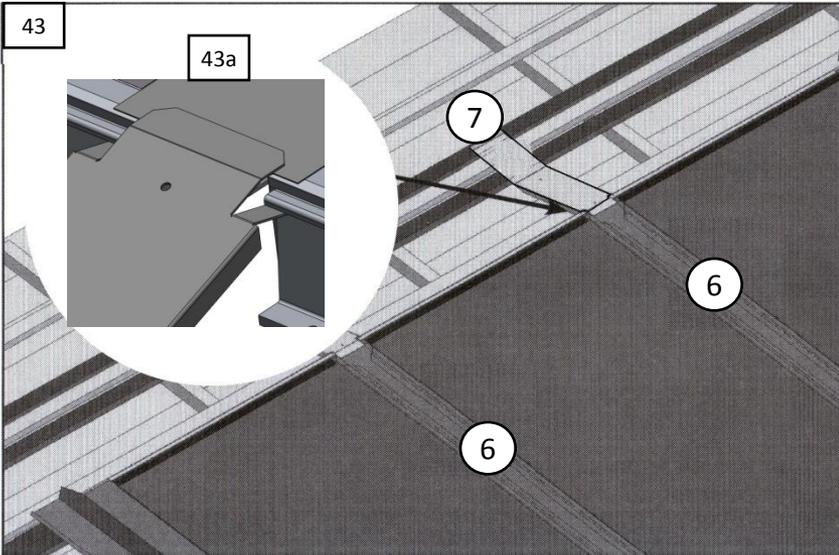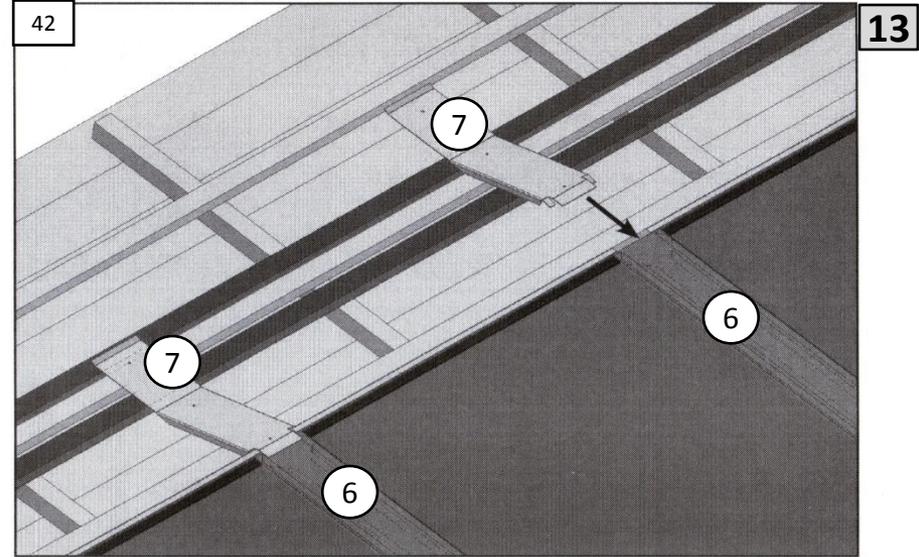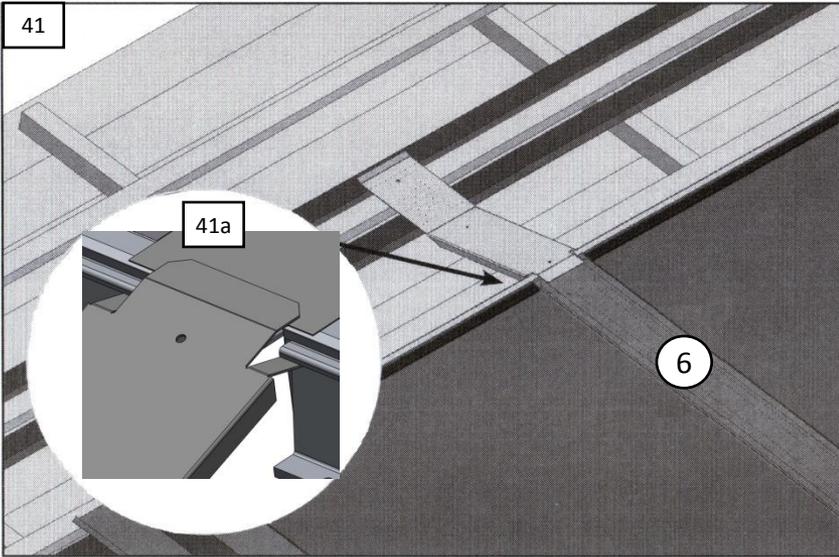

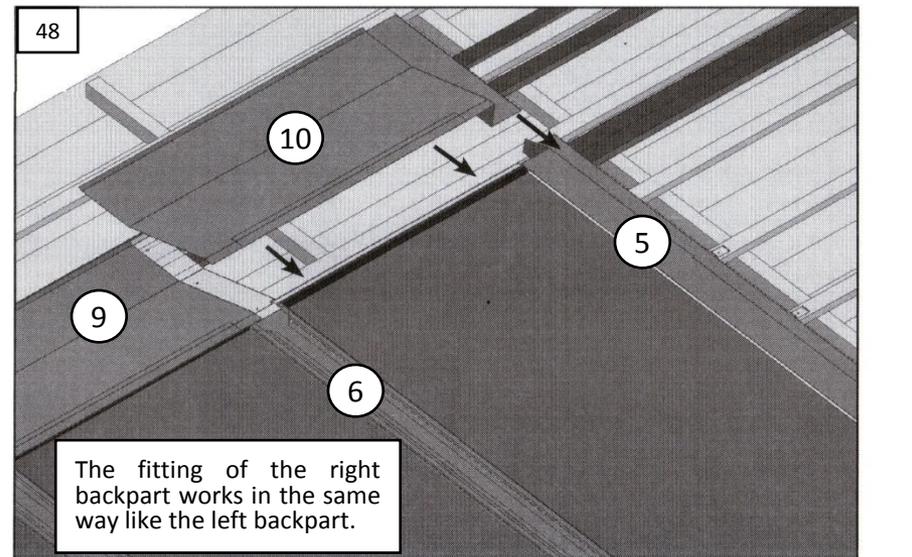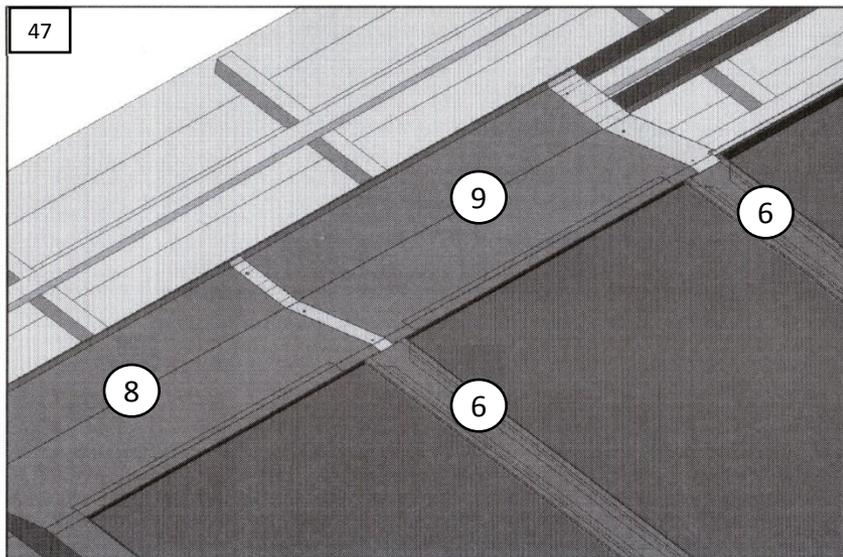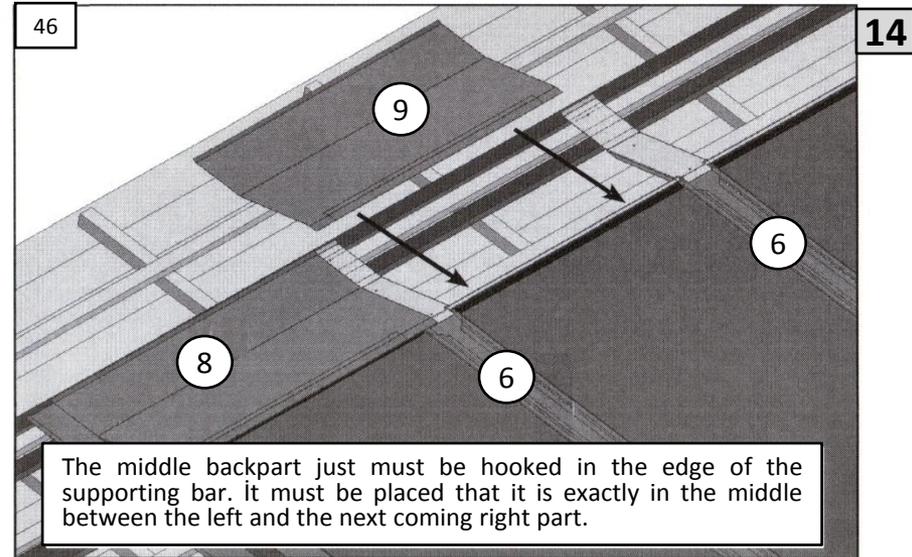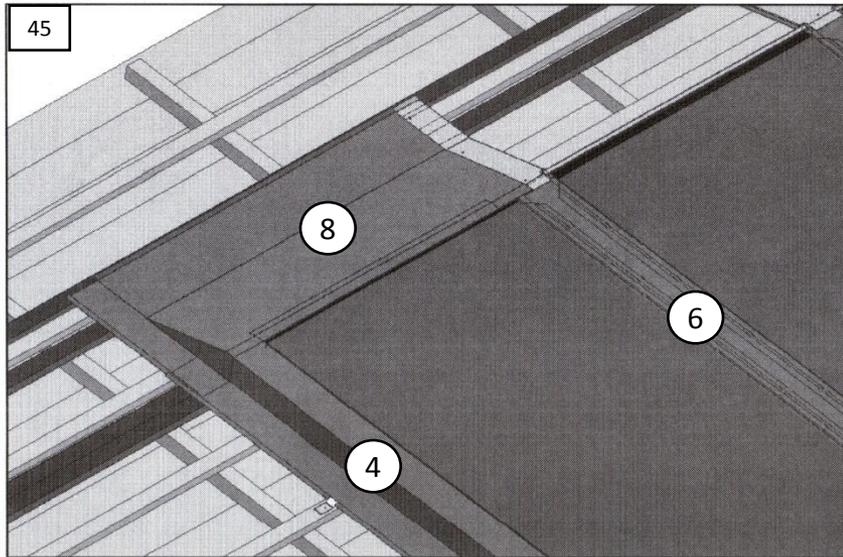

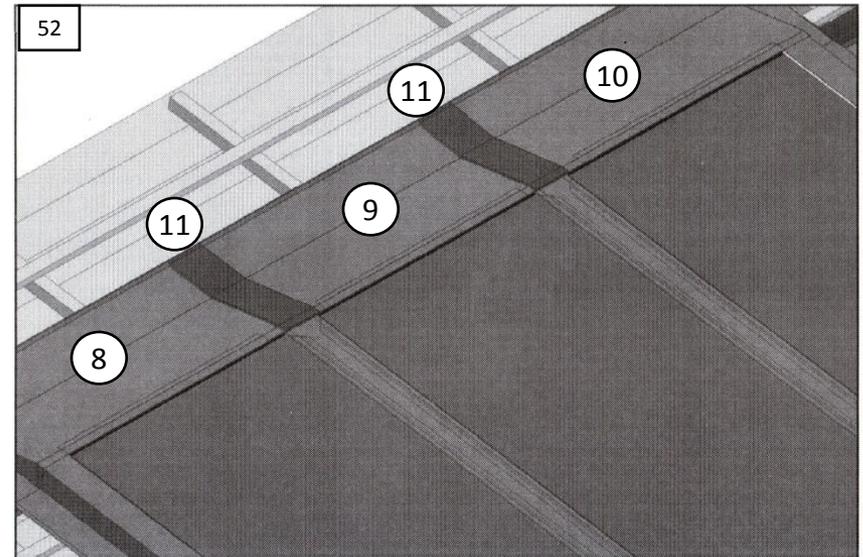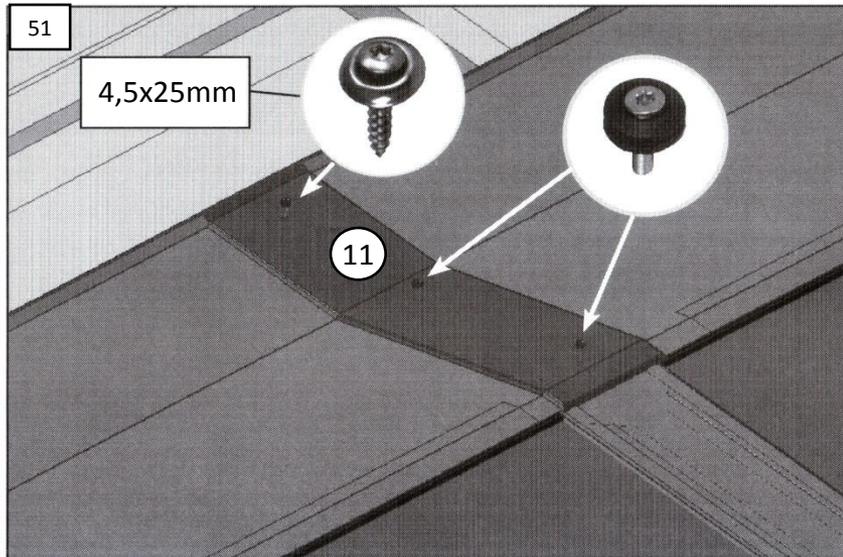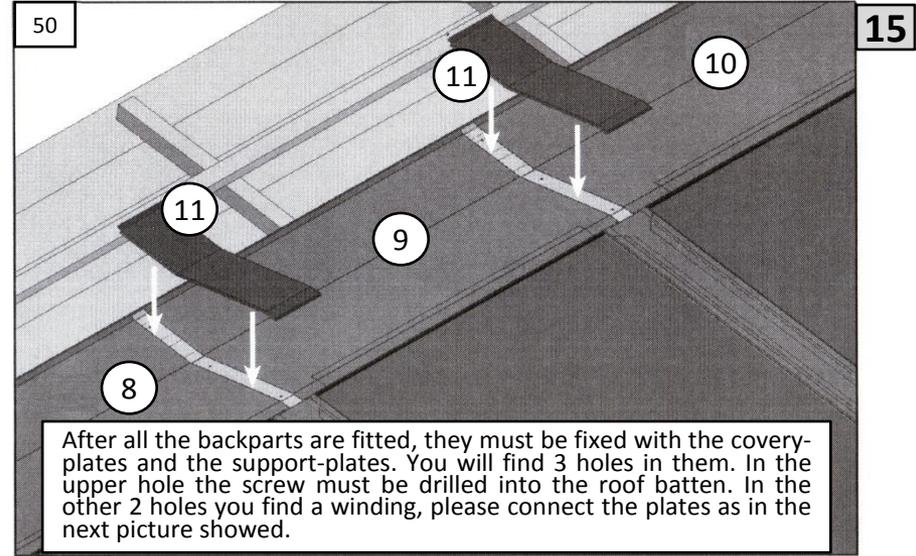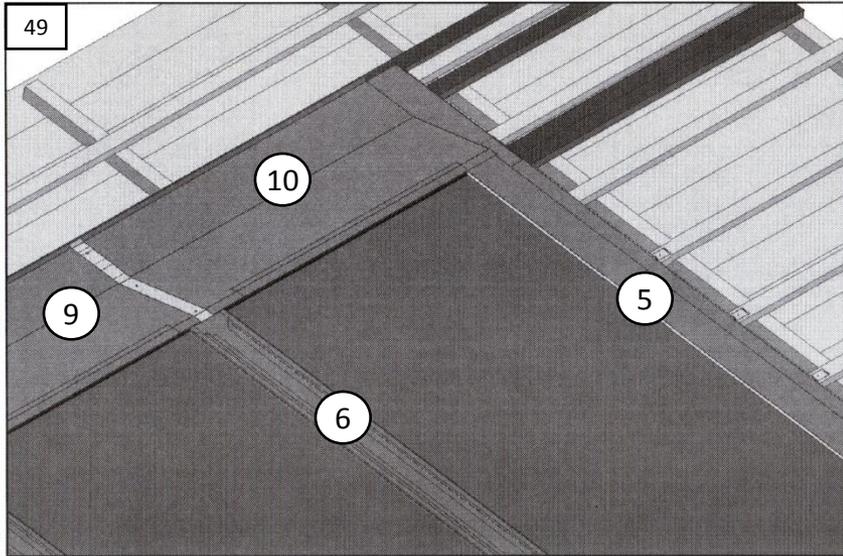


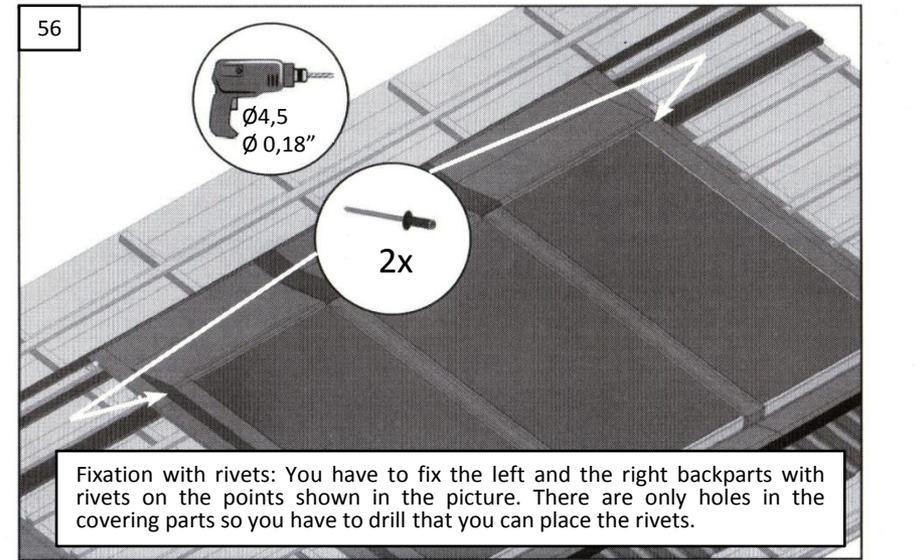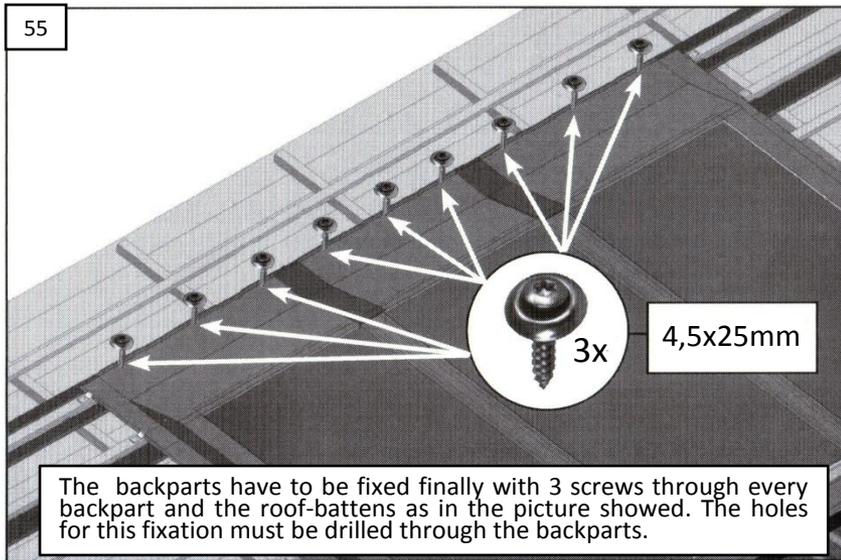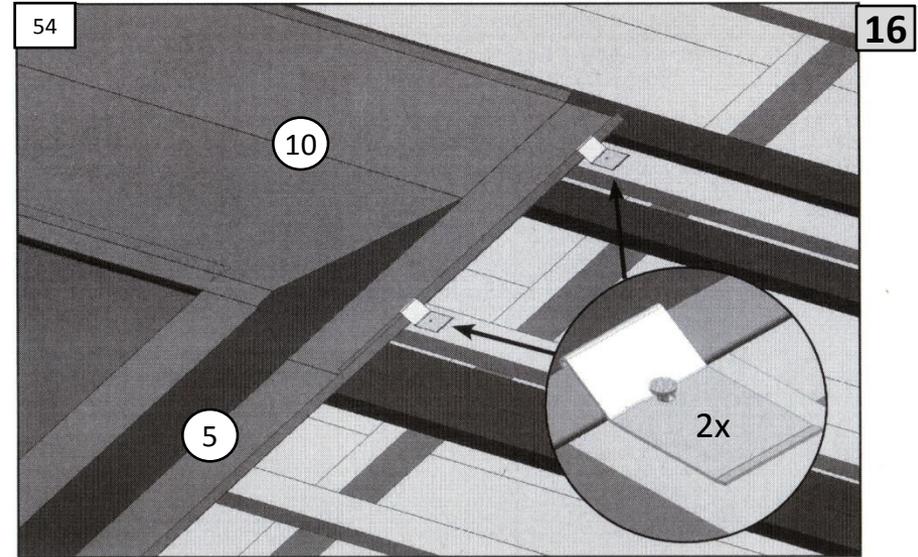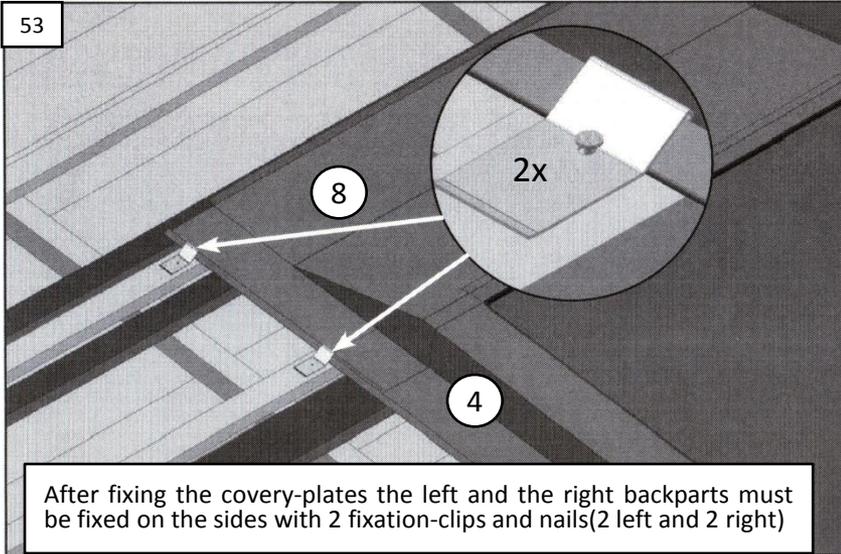

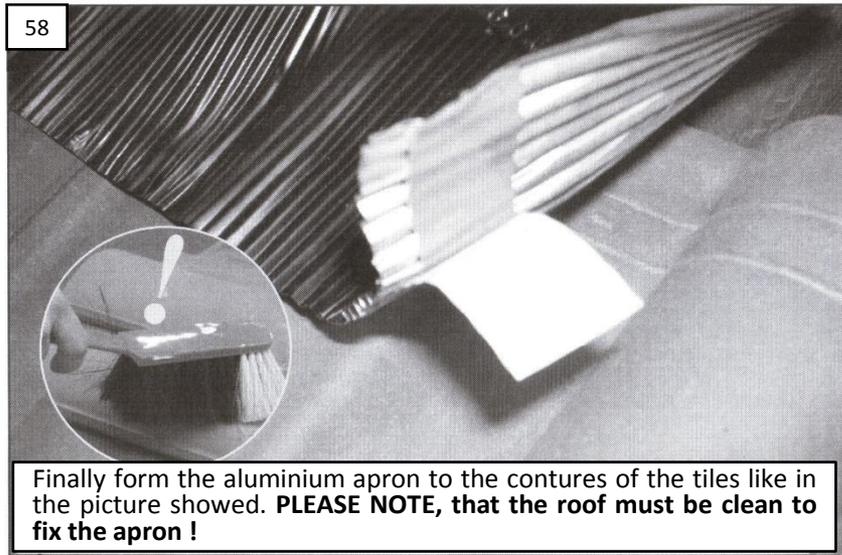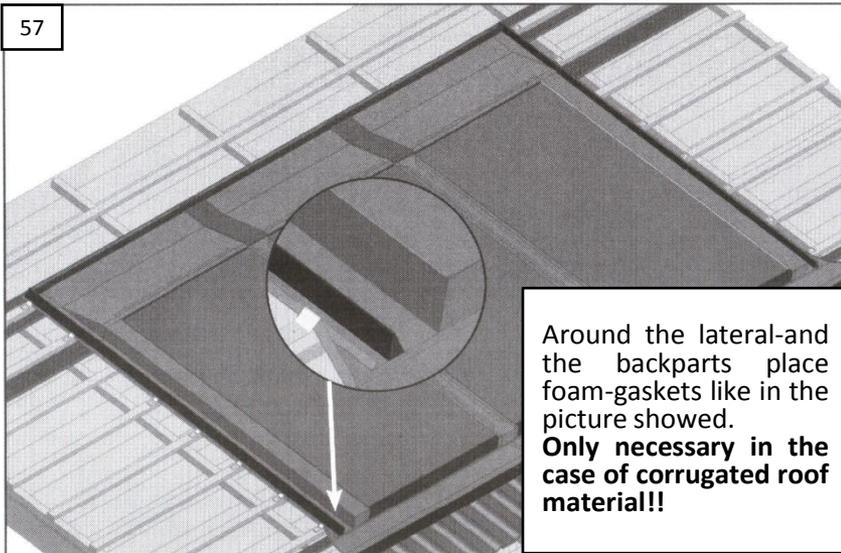


Left frontpart

①

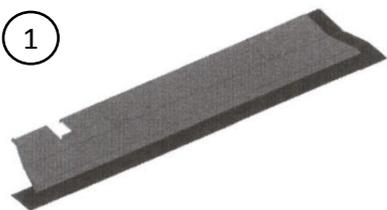


Middle frontpart

②

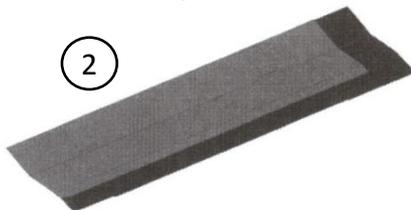


Right frontpart

③

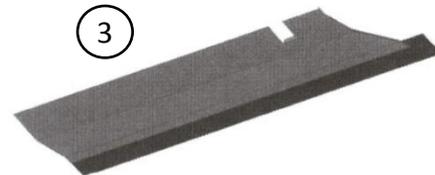


④

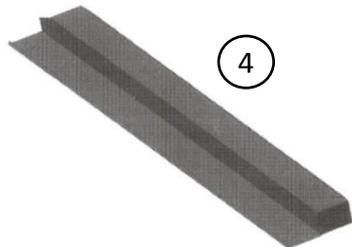


Left lateralpart

⑤

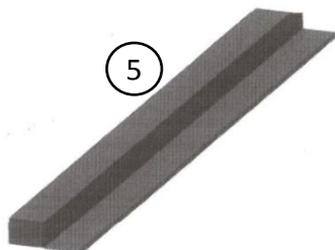

Right lateralpart

⑥

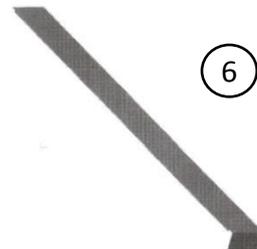


Connection part

7




Support plate for backparts

8

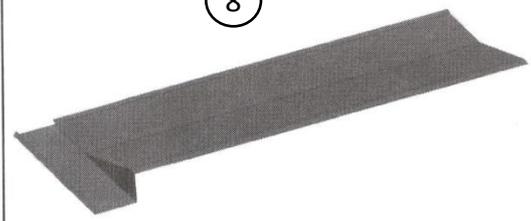


Left backpart

9

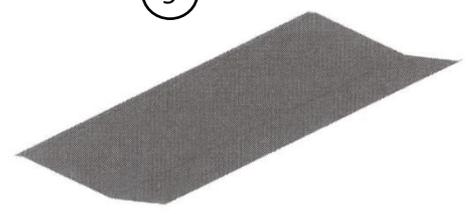

Middle part

10

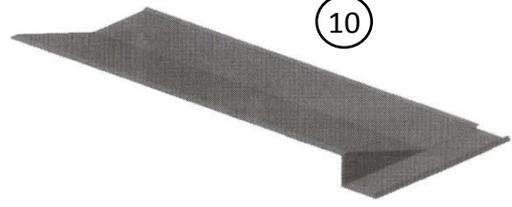

Riht backpart

11




Covery plate for backparts



Frontpart single collector



Backpart single collector

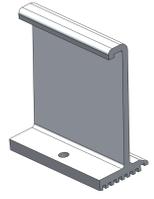

Sheet & collector holder